
Mounting instructions - BN Slat bench


© Copyright VelopA B.V.
www.velopa.com

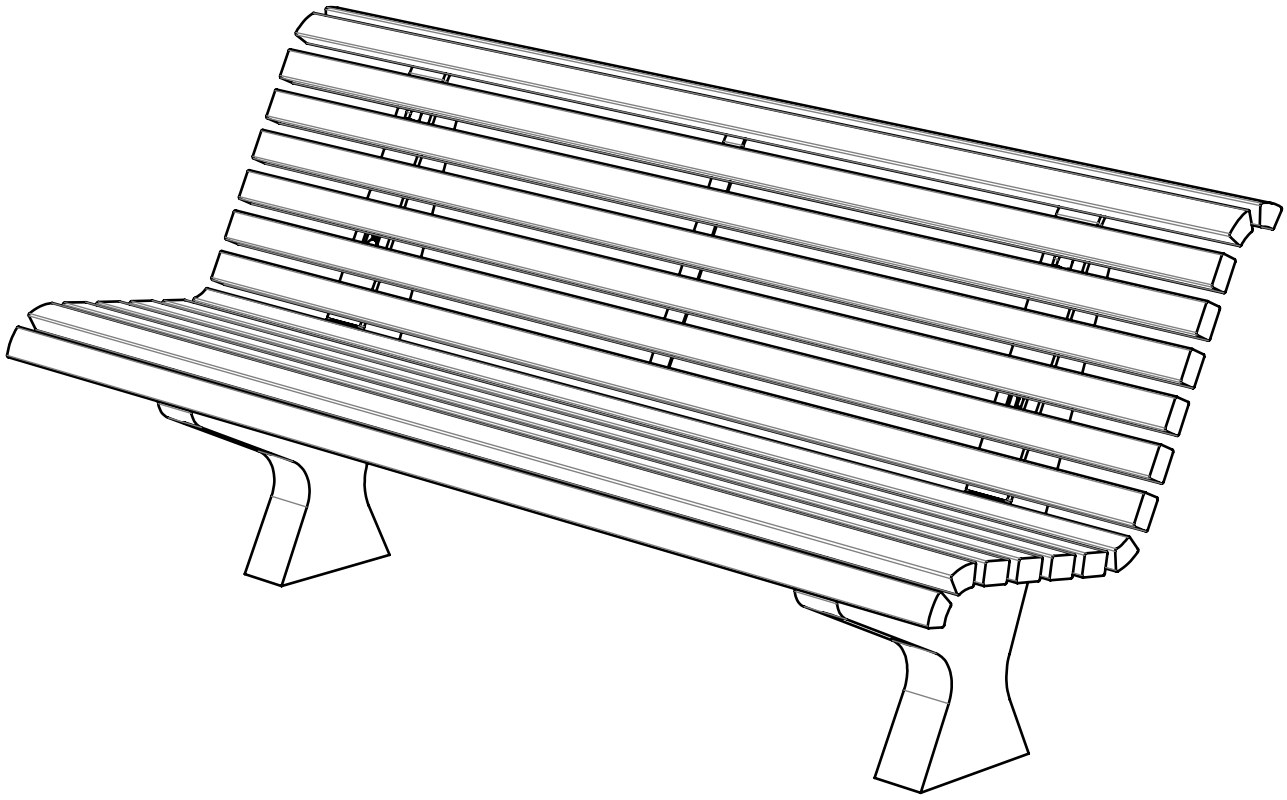


© Copyright VelopA B.V.


Upgrade from BN wood to Slat

1a.

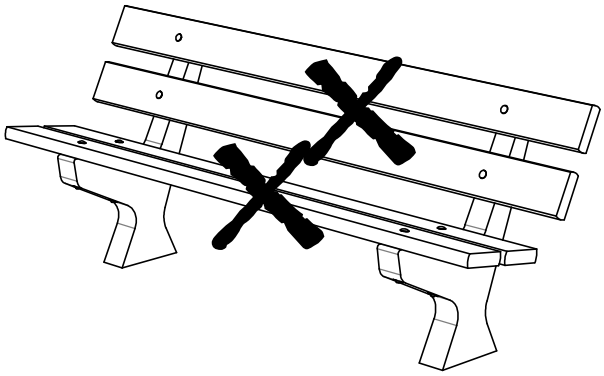

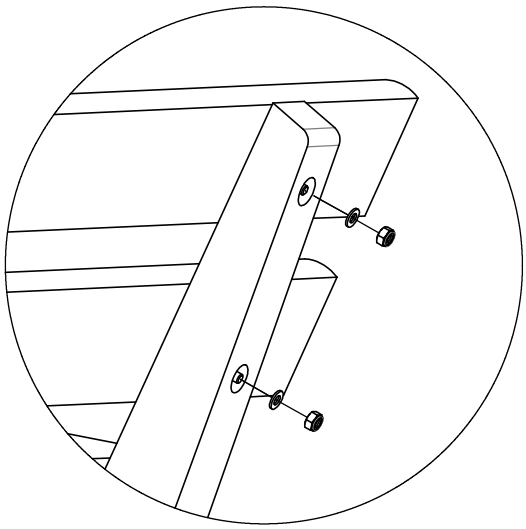


1b.

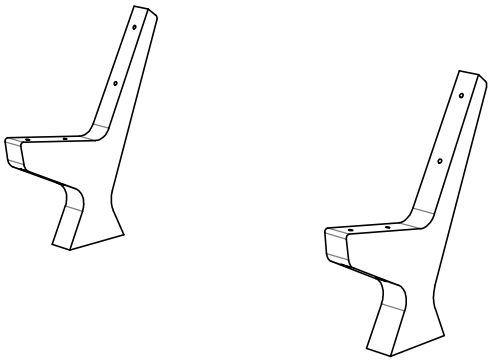


New bench

1.

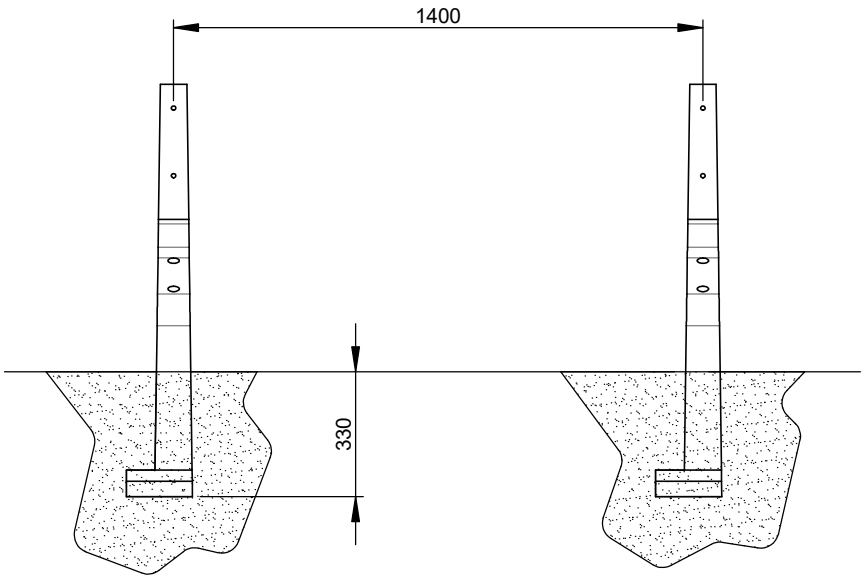


© Copyright VelopA B.V.

2.

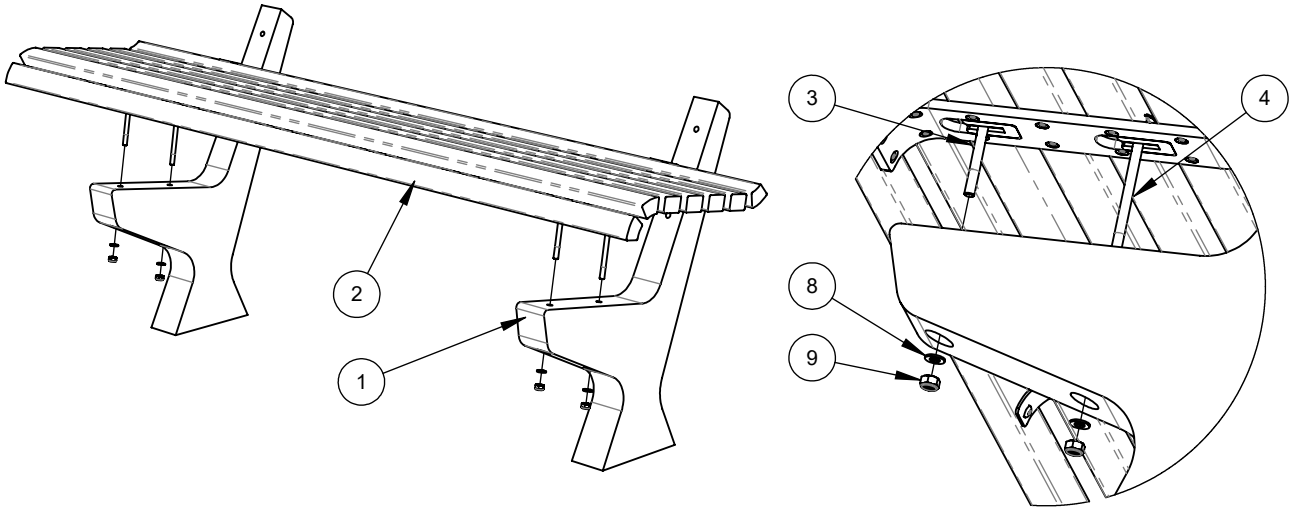

3.

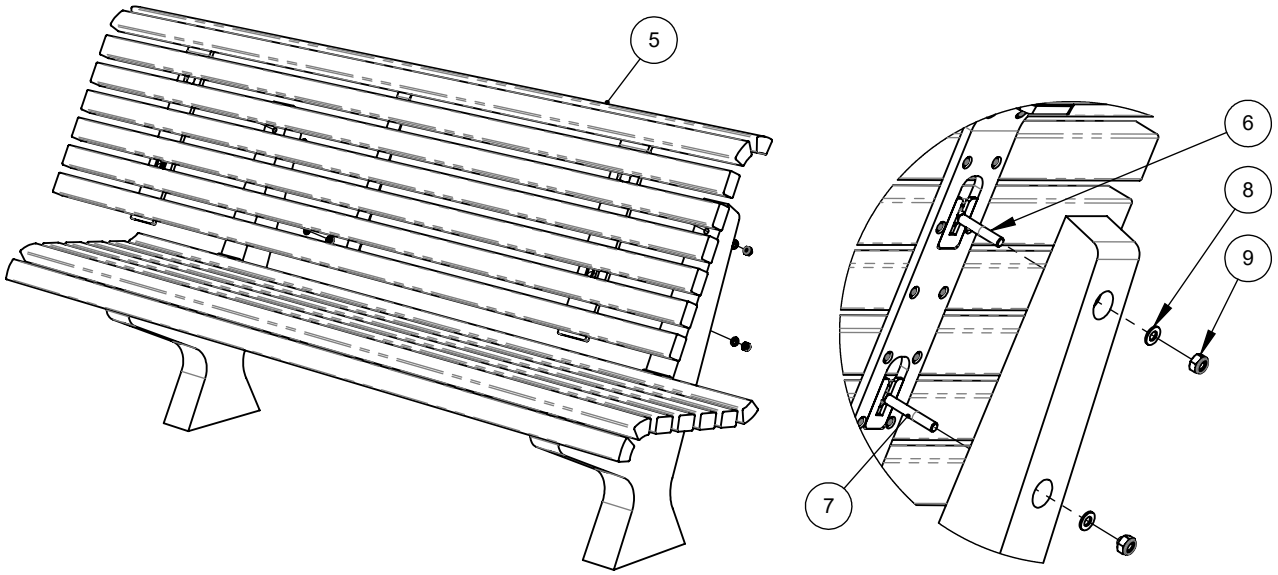

Pos. no.	Qty.	Art.no.	Remark	Name
1	2	29010200	-	BN leg
2	1	01157030	-	BN slat seat assembly 200
3	2	51840160	ISO 8677 - M10x100	Square necked bolt
4	2	51840210	ISO 8677 - M10x150	Square necked bolt
5	1	01157040	-	BN Slat backrest assembly
6	1	51840100	ISO 8677 - M10x60	Square necked bolt
7	1	51840120	ISO 8677 - M10x70	Square necked bolt
8	8	54140000	DIN 125 - M10	Washer M10
9	6	54340000	DIN 985 - M10	Torque nut M10